
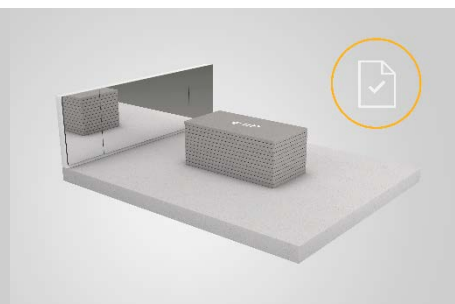


Installation Guide g-fit Shock Absorb

getzner
engineering a quiet future

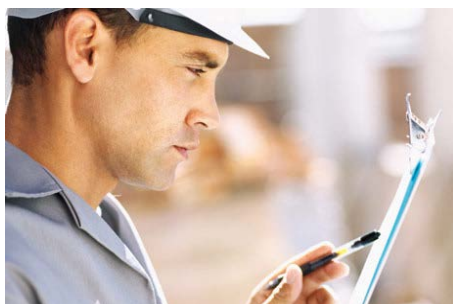

1) Please read through the installation guide carefully before you start the installation.

2) Requirements regarding the surface (screed, concrete, parquet floor, tiles):




- dry
- clean and well swept
- flat level surface (≤ 2 mm)

Protruding objects or contaminations must be removed.

3) The delivered material should have the possibility to acclimatize for 12 hours at room temperature.

The room temperature should be between 15°C and 25°C.

Please check the delivery before starting the installation with regards to completeness or damages.

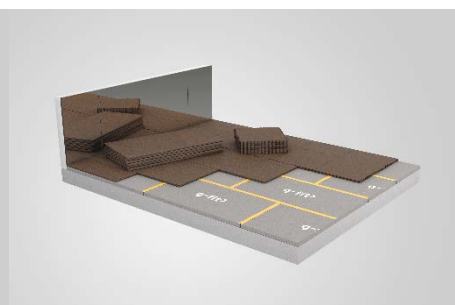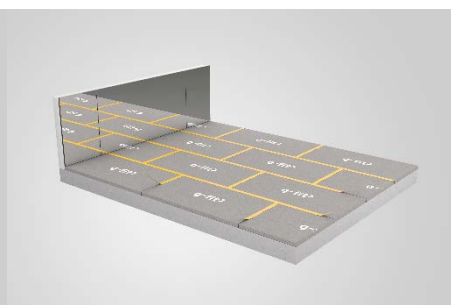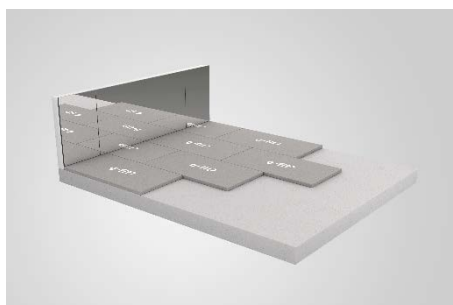

4) The sheets must be placed with the labelled surface upside. The tight, gapless installation should always be executed starting from one wall side. Avoid cross-shaped joints. Cuttings can be done with a common cutter-knife.

5) After installation of the complete surface it is recommended to seal the joints with an appropriate duct tape to avoid shifting.

Until the final installation of the floor covering the g-fit Shock Absorb sheets have to be protected from contaminations and damages caused by other installations or ongoing works.

6) Afterwards the respective floor covering can be installed according to the instructions of the manufacturer (rolls or tiles). The joints should be staggered in this case as well.

A loose installation of the floor covering on top of g-fit Shock Absorb is not recommended.

All information and data is based on our current knowledge.

These can be used as a proposal for the installation of g-fit Shock Absorb. Information is subject to change without notice.

Installation guidelines in other languages are available on our homepage.

AUSTRIA – Bürs GERMANY – Berlin – Munich – Stuttgart FRANCE – Lyon JORDAN – Amman
JAPAN – Tokyo INDIA – Pune CHINA – Beijing USA – Charlotte www.getzner.com

getzner
engineering a quiet future